
## **Thermocouples**

## **General Applications Tube and Wire**

Adjustable Spring Styles 10 and 11

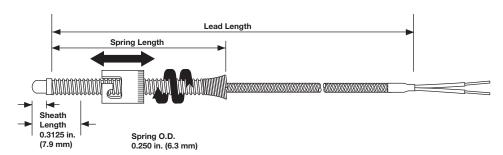

Adjustable spring style thermocouples bend to any angle to fit a wide range of hole depths, eliminating the need to stock numerous styles.

## **Ordering Information**

## Part Number

rait ivuii	inei						
1 2	3	4	<b>(5</b> )	6	7	8 9 10	(1)
0 0	Ŭ	, i	, o		, j		<u> </u>
Const. Style	Sheath Diameter	Calibration	Lead Protection	Junction	Sheath Length	Lead Length	Term./ Options
	D				В		

1 2	Construction Style
10 =	<sup>7</sup> / <sub>16</sub> in. I.D. single slot (standard cap) - 6 in. spring
11 =	<sup>7</sup> / <sub>16</sub> in. I.D. single slot (standard cap) - 12 in. spring
3	Sheath Diameter (in.) 316 SS
3 D =	Sheath Diameter (in.) 316 SS 3/16 in.

4		Calibration
J	=	Type J
Κ	=	Type J Type K
Τ	=	Type T
Е	=	Type E

5		Lead Protection
F	=	Fiberglass (24 gauge stranded)
S	=	Fiberglass with stainless steel overbraid (24 gauge stranded)
Р	=	Fiberglass (20 gauge stranded)
В	=	Fiberglass with stainless steel overbraid (20 gauge stranded)
Т	=	PFA (24 gauge stranded)
U	=	PFA with stainless steel overbraid (24 gauge stranded)
V	=	PFA (20 gauge stranded)
W	=	PFA with stainless steel overbraid (20 gauge stranded)

6	Junction
F =	Grounded, flat tip
G =	Grounded, round tip
D =	Grounded, drill point
R =	Ungrounded, flat tip
U =	Ungrounded, round tip
P =	Ungrounded, drill point

<ul> <li>Sheath Length (in.)</li> <li>1 in. (25 mm)</li> <li>1 Lead Length (in.)</li> <li>1 Available lengths: 006 to 360 in., over 360 in. contact factory</li> <li>1 Termination/Options</li> </ul>		
<ul> <li>8 9 10 Lead Length (in.)</li> <li>Available lengths: 006 to 360 in., over 360 in. contact factory</li> <li>10 Termination/Options</li> </ul>	7	Sheath Length (in.)
Available lengths: 006 to 360 in., over 360 in. contact factory  Termination/Options	B =	1 in. (25 mm)
① Termination/Options	8 9	10 Lead Length (in.)
C TOTAL COLUMN C PROCES	Availa	able lengths: 006 to 360 in., over 360 in. contact factory
	11)	Termination/Options
Firmware, Overlays, Parameter Settings		
A = Standard, 2 <sup>1</sup> / <sub>2</sub> in. split leads	A =	Standard, 21/2 in. split leads

w		Termination/Options		
Fire	Firmware, Overlays, Parameter Settings			
Α	=	Standard, 2 <sup>1</sup> / <sub>2</sub> in. split leads		
В	=	2 <sup>1</sup> / <sub>2</sub> in. split leads with #6 spade lugs		
С	=	21/2 in. split leads with #6 spade lugs and BX connector		
D	=	Standard male plug, quick disconnect		
Е	=	Standard female jack, quick disconnect		
F	=	Miniature male plug, quick disconnect		
G	=	Miniature female jack, quick disconnect		
Н	=	<sup>1</sup> / <sub>4</sub> in. push-on connector		

WATLOW® 33